



BEECO FRIENDLY DOUBLE CHECK (1/2" - 2")

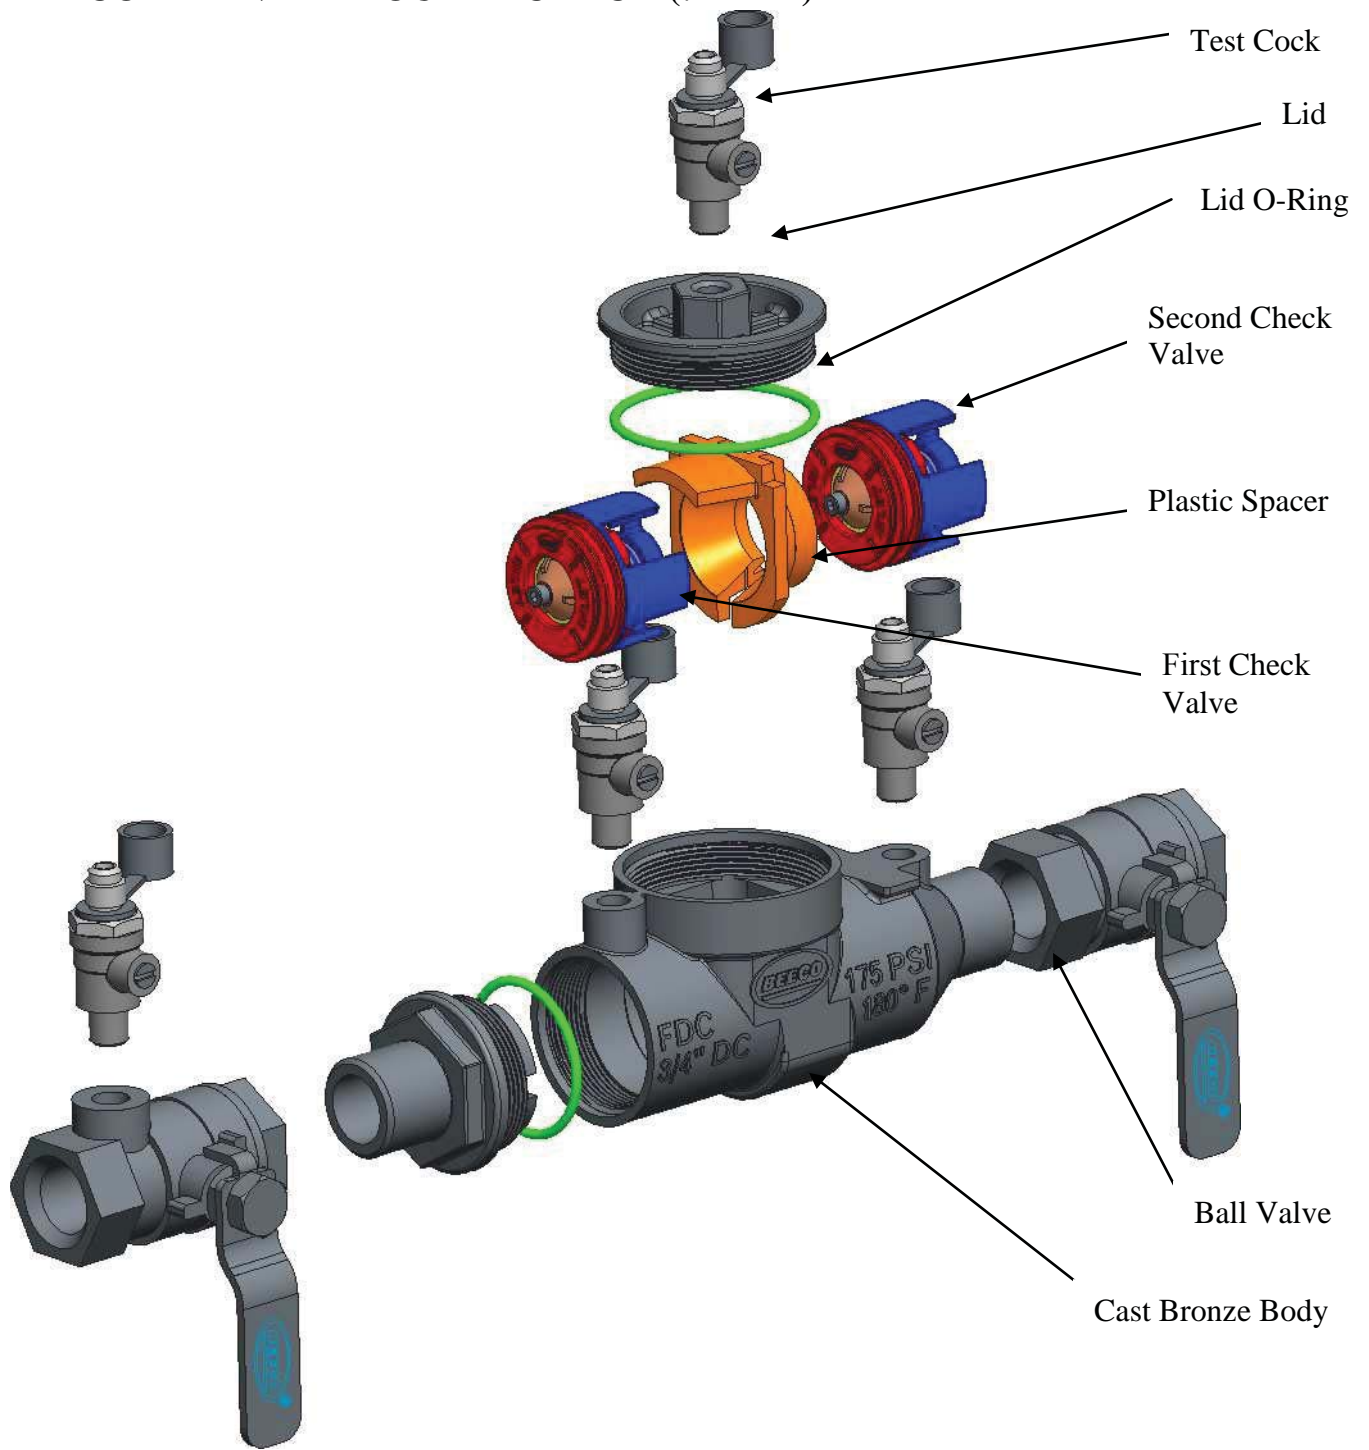

BEECO CHECK VALVE (1/2" – 2")

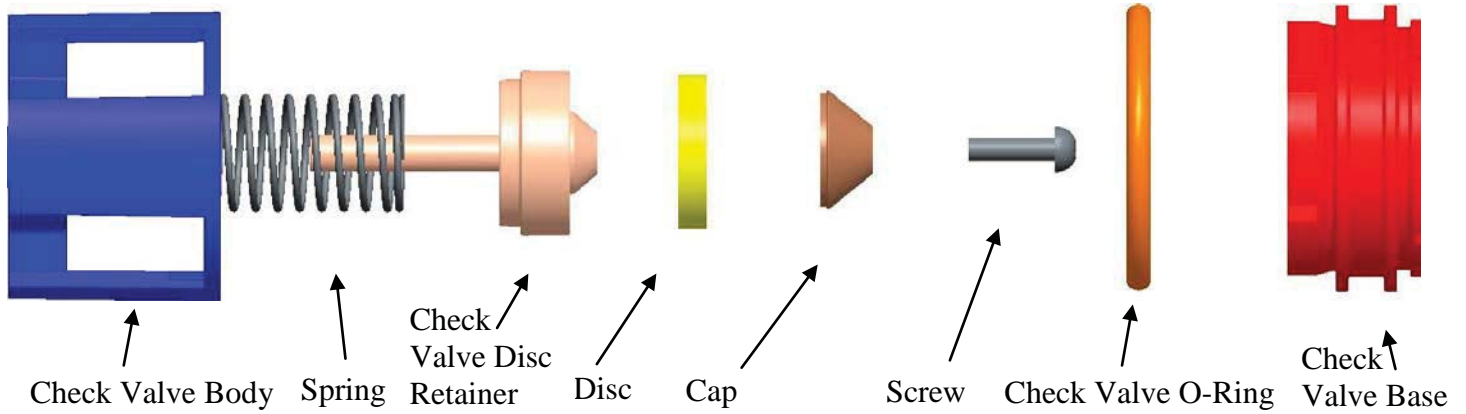

Trouble Shooting Guide

Problem	Probable Causes
No flow	Device installed backwards.
	Upstream or downstream gate valves not open.
	Clogged strainer or clogged device.
Low flow	Low supply pressure.
	Pressure drop through the device.
	Device's gate valves not opened completely.
Leaking Check Valves	Debris on seat area or seal
	Damaged seat area
	Damaged seal